


MODEL T TENSIONER

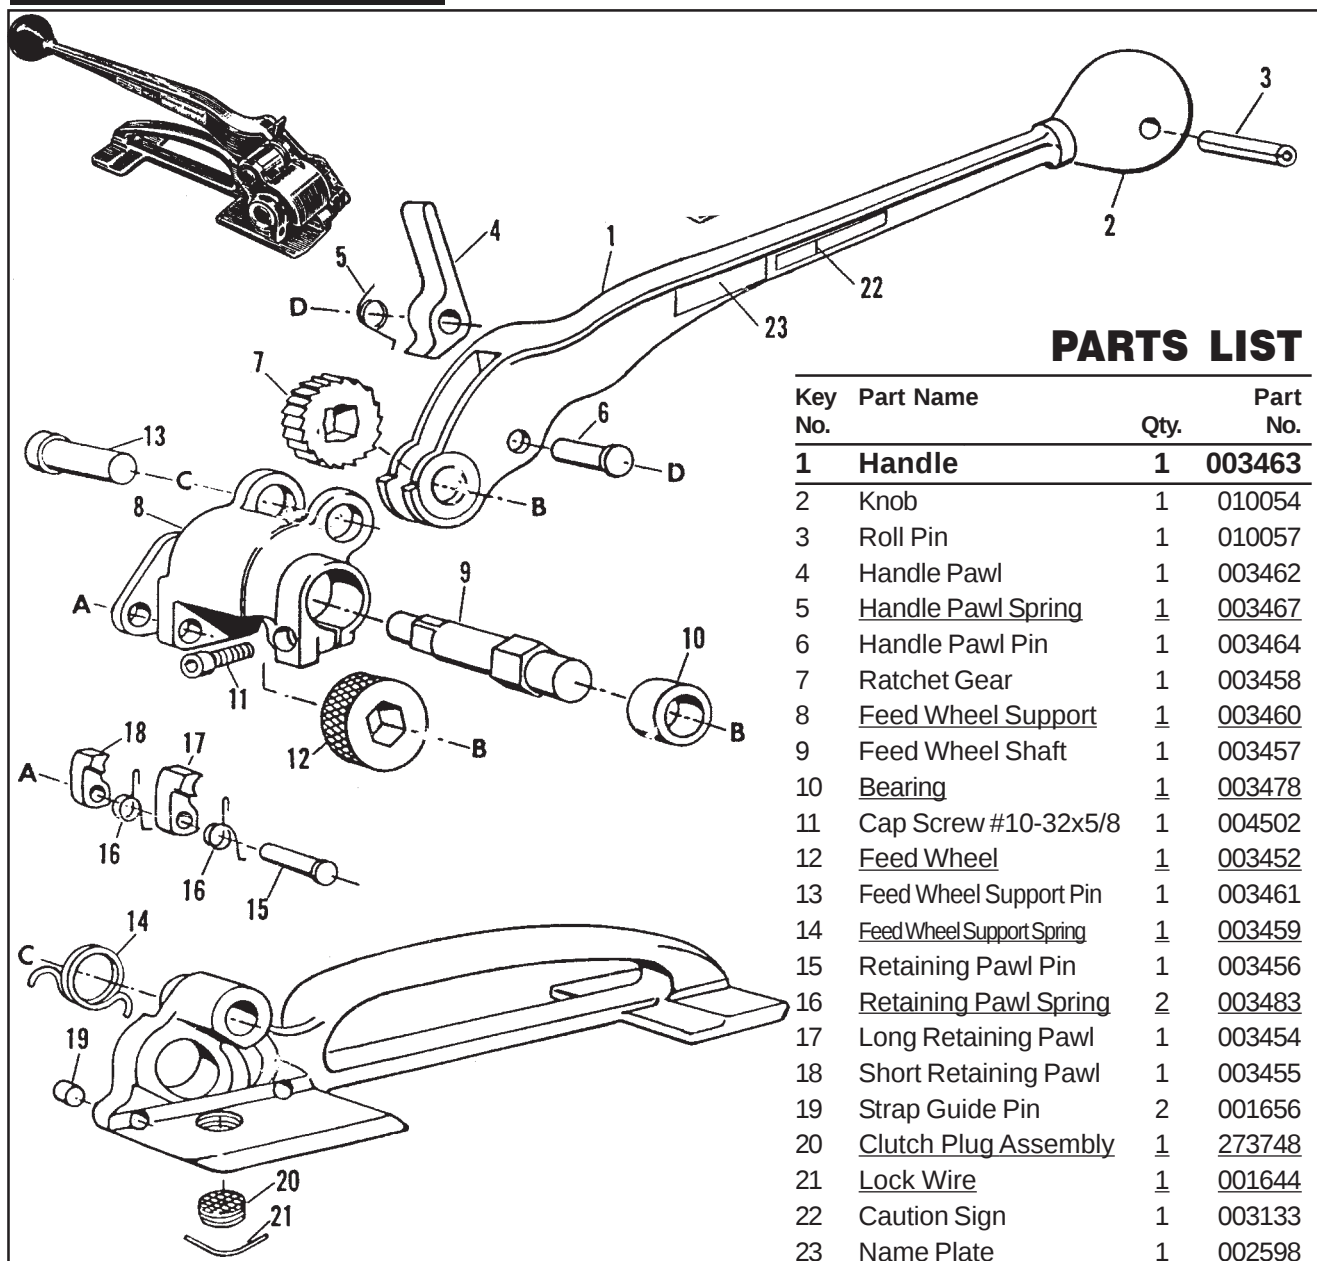

PARTS LIST

Key No.	Part Name	Qty.	Part No.
1	Handle	1	003463
2	Knob	1	010054
3	Roll Pin	1	010057
4	Handle Pawl	1	003462
5	Handle Pawl Spring	1	003467
6	Handle Pawl Pin	1	003464
7	Ratchet Gear	1	003458
8	<u>Feed Wheel Support</u>	<u>1</u>	<u>003460</u>
9	Feed Wheel Shaft	1	003457
10	<u>Bearing</u>	<u>1</u>	<u>003478</u>
11	Cap Screw #10-32x5/8	1	004502
12	<u>Feed Wheel</u>	<u>1</u>	<u>003452</u>
13	Feed Wheel Support Pin	1	003461
14	<u>Feed Wheel Support Spring</u>	<u>1</u>	<u>003459</u>
15	Retaining Pawl Pin	1	003456
16	<u>Retaining Pawl Spring</u>	<u>2</u>	<u>003483</u>
17	Long Retaining Pawl	1	003454
18	Short Retaining Pawl	1	003455
19	Strap Guide Pin	2	001656
20	<u>Clutch Plug Assembly</u>	<u>1</u>	<u>273748</u>
21	<u>Lock Wire</u>	<u>1</u>	<u>001644</u>
22	Caution Sign	1	003133
23	Name Plate	1	002598

WARNING

All parts must be periodically inspected and replaced if worn or broken. Failure to do this can affect the tool's operation and present a safety hazard.

WHEN ORDERING PARTS PLEASE SHOW TOOL MODEL, PART NUMBER AND NAME. WEARING PARTS ARE USUALLY LIMITED TO THOSE UNDERLINED. COMMON HARDWARE PARTS MAY BE OBTAINED AT ANY LOCAL HARDWARE SUPPLY.